


Digital Recording Module

Thank you for purchasing your Digital Recording Module from **RadioShack**. This module is pre-wired and ready for installation in a cabinet. Please read this user's guide before installing, setting up and using your new product.

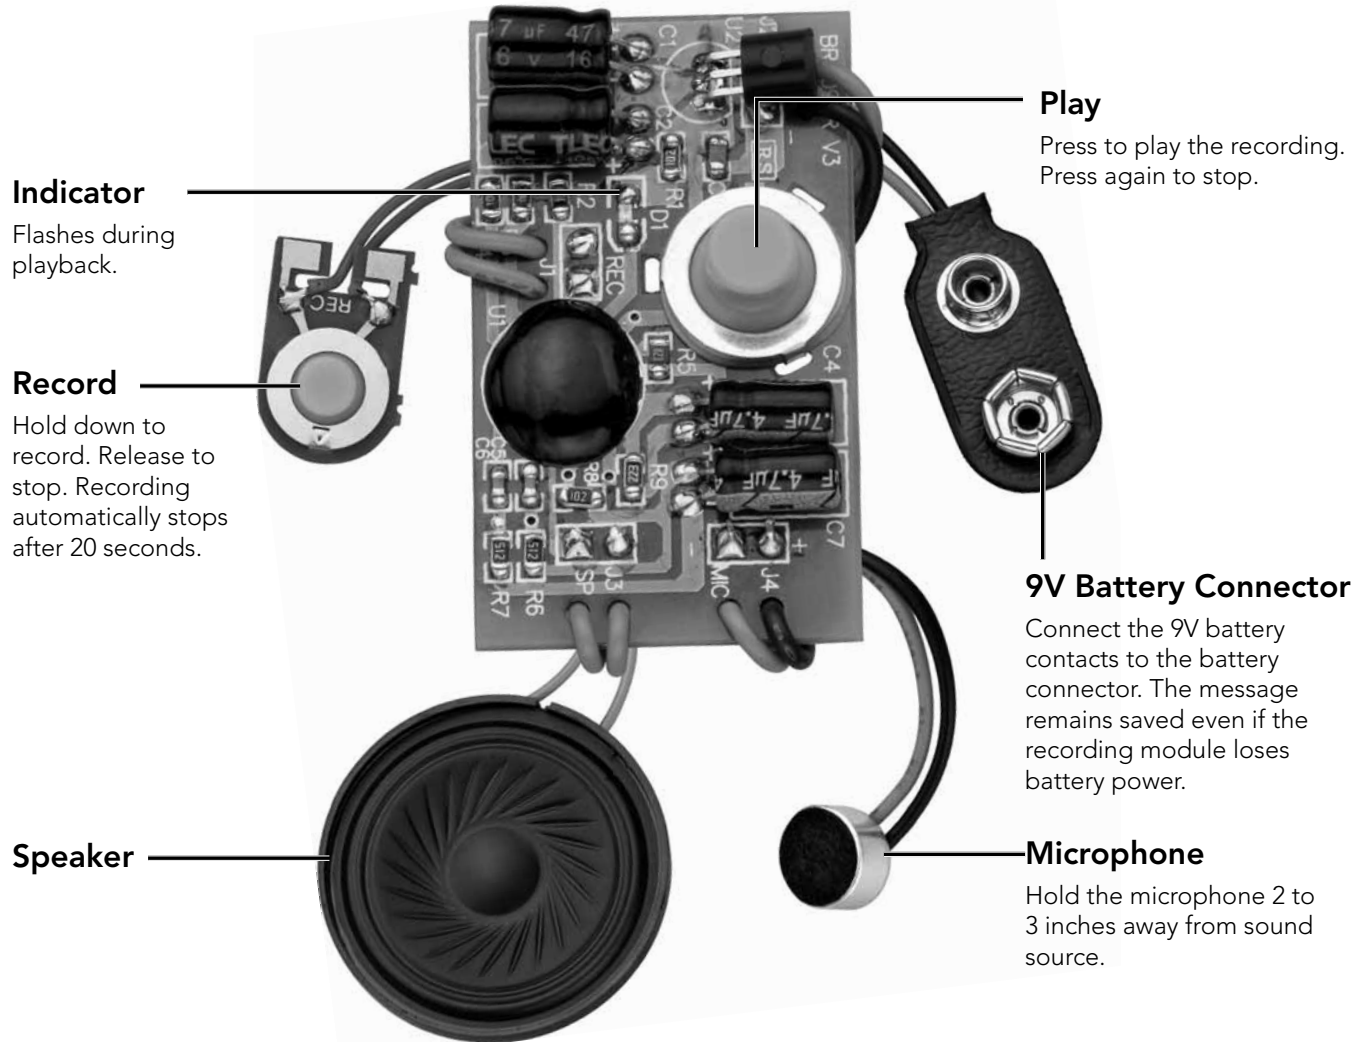

Indicator
Flashes during playback.

Record
Hold down to record. Release to stop. Recording automatically stops after 20 seconds.

Speaker

Play
Press to play the recording. Press again to stop.

9V Battery Connector
Connect the 9V battery contacts to the battery connector. The message remains saved even if the recording module loses battery power.

Microphone
Hold the microphone 2 to 3 inches away from sound source.

What's Included

Recording Module

User's Guide

Battery Notes

- If the recording sound weakens, replace the battery.
- Use only a fresh battery of the required size and recommended size.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- If you do not plan to use your recording module for a long time, remove the battery. Batteries can leak chemicals that can damage electronic parts.

Specifications

Record/Playback Module.....	128K Non-Volatile Cell
Standby Current.....	Analog Storage Array
Operating Current	< 10 μ A
Recording	< 20 mA
Playback	< 40 mA
Operating Voltage.....	9V DC
Power Source	One 9V Battery (Not Supplied)
Maximum Recording Time.....	20 Seconds

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from **RadioShack** company-owned stores and authorized **RadioShack** franchisees and dealers. EXCEPT AS PROVIDED HEREIN, **RadioShack** MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, **RadioShack** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RadioShack** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store. **RadioShack** will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

12/99

www.radioshack.com



Protect the environment by recycling used electronics. Go to www.ecyclingcentral.com to find a recycle location near you.