

Digital Recording Module



Thank you for purchasing your Digital Recording Module from **RadioShack**. Please read this user's guide before installing, setting up, and using your new recording module.

Package contents

- Recording Module
- User's Guide

Features


- 20 second voice recorder
- One button replay
- For craft projects or science fairs



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

1 Connect a 9V Battery


Connect the 9V battery contacts to the battery connector. The message remains saved even if the recording module loses battery power.

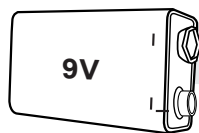

2 Record message

Record

Hold down to record. Release to stop. Recording automatically stops after 20 seconds.

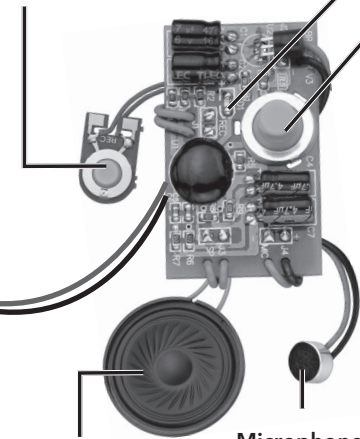

Speaker

Microphone

Hold the microphone 2 to 3 inches away from sound source.

3 Play message

Indicator

Flashes during playback.

Play

Press to play the recording. Press again to stop.



Battery Notes:

- If the recording sound weakens, replace the battery.
- *Dispose of batteries promptly and properly. Do not burn or bury them.*
- *Use only fresh batteries of the required size and type.*
- *If you do not plan to use the recorder for a long period of time remove the battery. Batteries can leak chemicals that can damage electronic parts.*

Specifications

Record/Playback Module . 128K Non-Volatile Cell Analog Storage Array

Standby Current < 10 μ A

Operating Current

Recording < 20 mA

Playback < 40 mA

Operating Voltage 9V DC

Power Source One 9V Battery (Not Supplied)

Maximum Recording Time 20 Seconds

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK** MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor;

(b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at:

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

www.RadioShack.com

©2009. **RadioShack** Corporation.
All rights reserved. **RadioShack** and **RadioShack.com** are trademarks used by **RadioShack** Corporation.